




	1	2	3	4
A				
	#	Circuit name	Fuse rating	
	W0	Ground		
	W1	Fuse Panel power supply	12V 40A	Main fuse panel
	W2	Heater power supply	12V 15A	
	W4	Kitchen module power supply (freezer and pump)	12V 15A	
	W5	Bulge pump 1, manual mode	12V 10A	
	WA5	Bulge pump 1, aumomatic mode	12V 5A	
B	WB5	Washing pump power supply	12V 15A	
	W6	Bulge pump 2, manual mode	12V 10A	Console fuse panel
	W15	Cabin Light	12V 3A	
	W16	Anchor Light	12V 3A	
	W17	Stern Deck Light	12V 3A	
	W18	Navigation Lights ,Fuel level gauges power supply	12V 3A	
C	W24	Floor light	12V 3A	
	W31	Berth light	12V 3A	
	W41	Bow anchor winch control power supply	12V 5A	
	W42	Stern anchor winch control power supply	12V 5A	
	WB26	Wiper portside power supply	12V 5A	
	WB28	Wiper starboard side power supply	12V 5A	
	W30	Horn power supply	12V 10A	
D	W36	USB outlet	12V 10A	
	W37	Sound system power supply (AUX)	12V 10A	
	W38	Sound system power supply (AUX)	12V 10A	
	W40	Trim tabs power supply	12V 15A	
	W44	Floor light stern deck	12V 3A	
E	W45	Floor light cabin	12V 3A	
F				
	 VBOATS			
	Electric circuit diagram VBOATS VOYAGER 700 CABIN, COB, 800 CABIN, COB Circuit diagram subject to change without notice.			
	Rev: 22-12		Page: 2/3	
	1	2	3	4

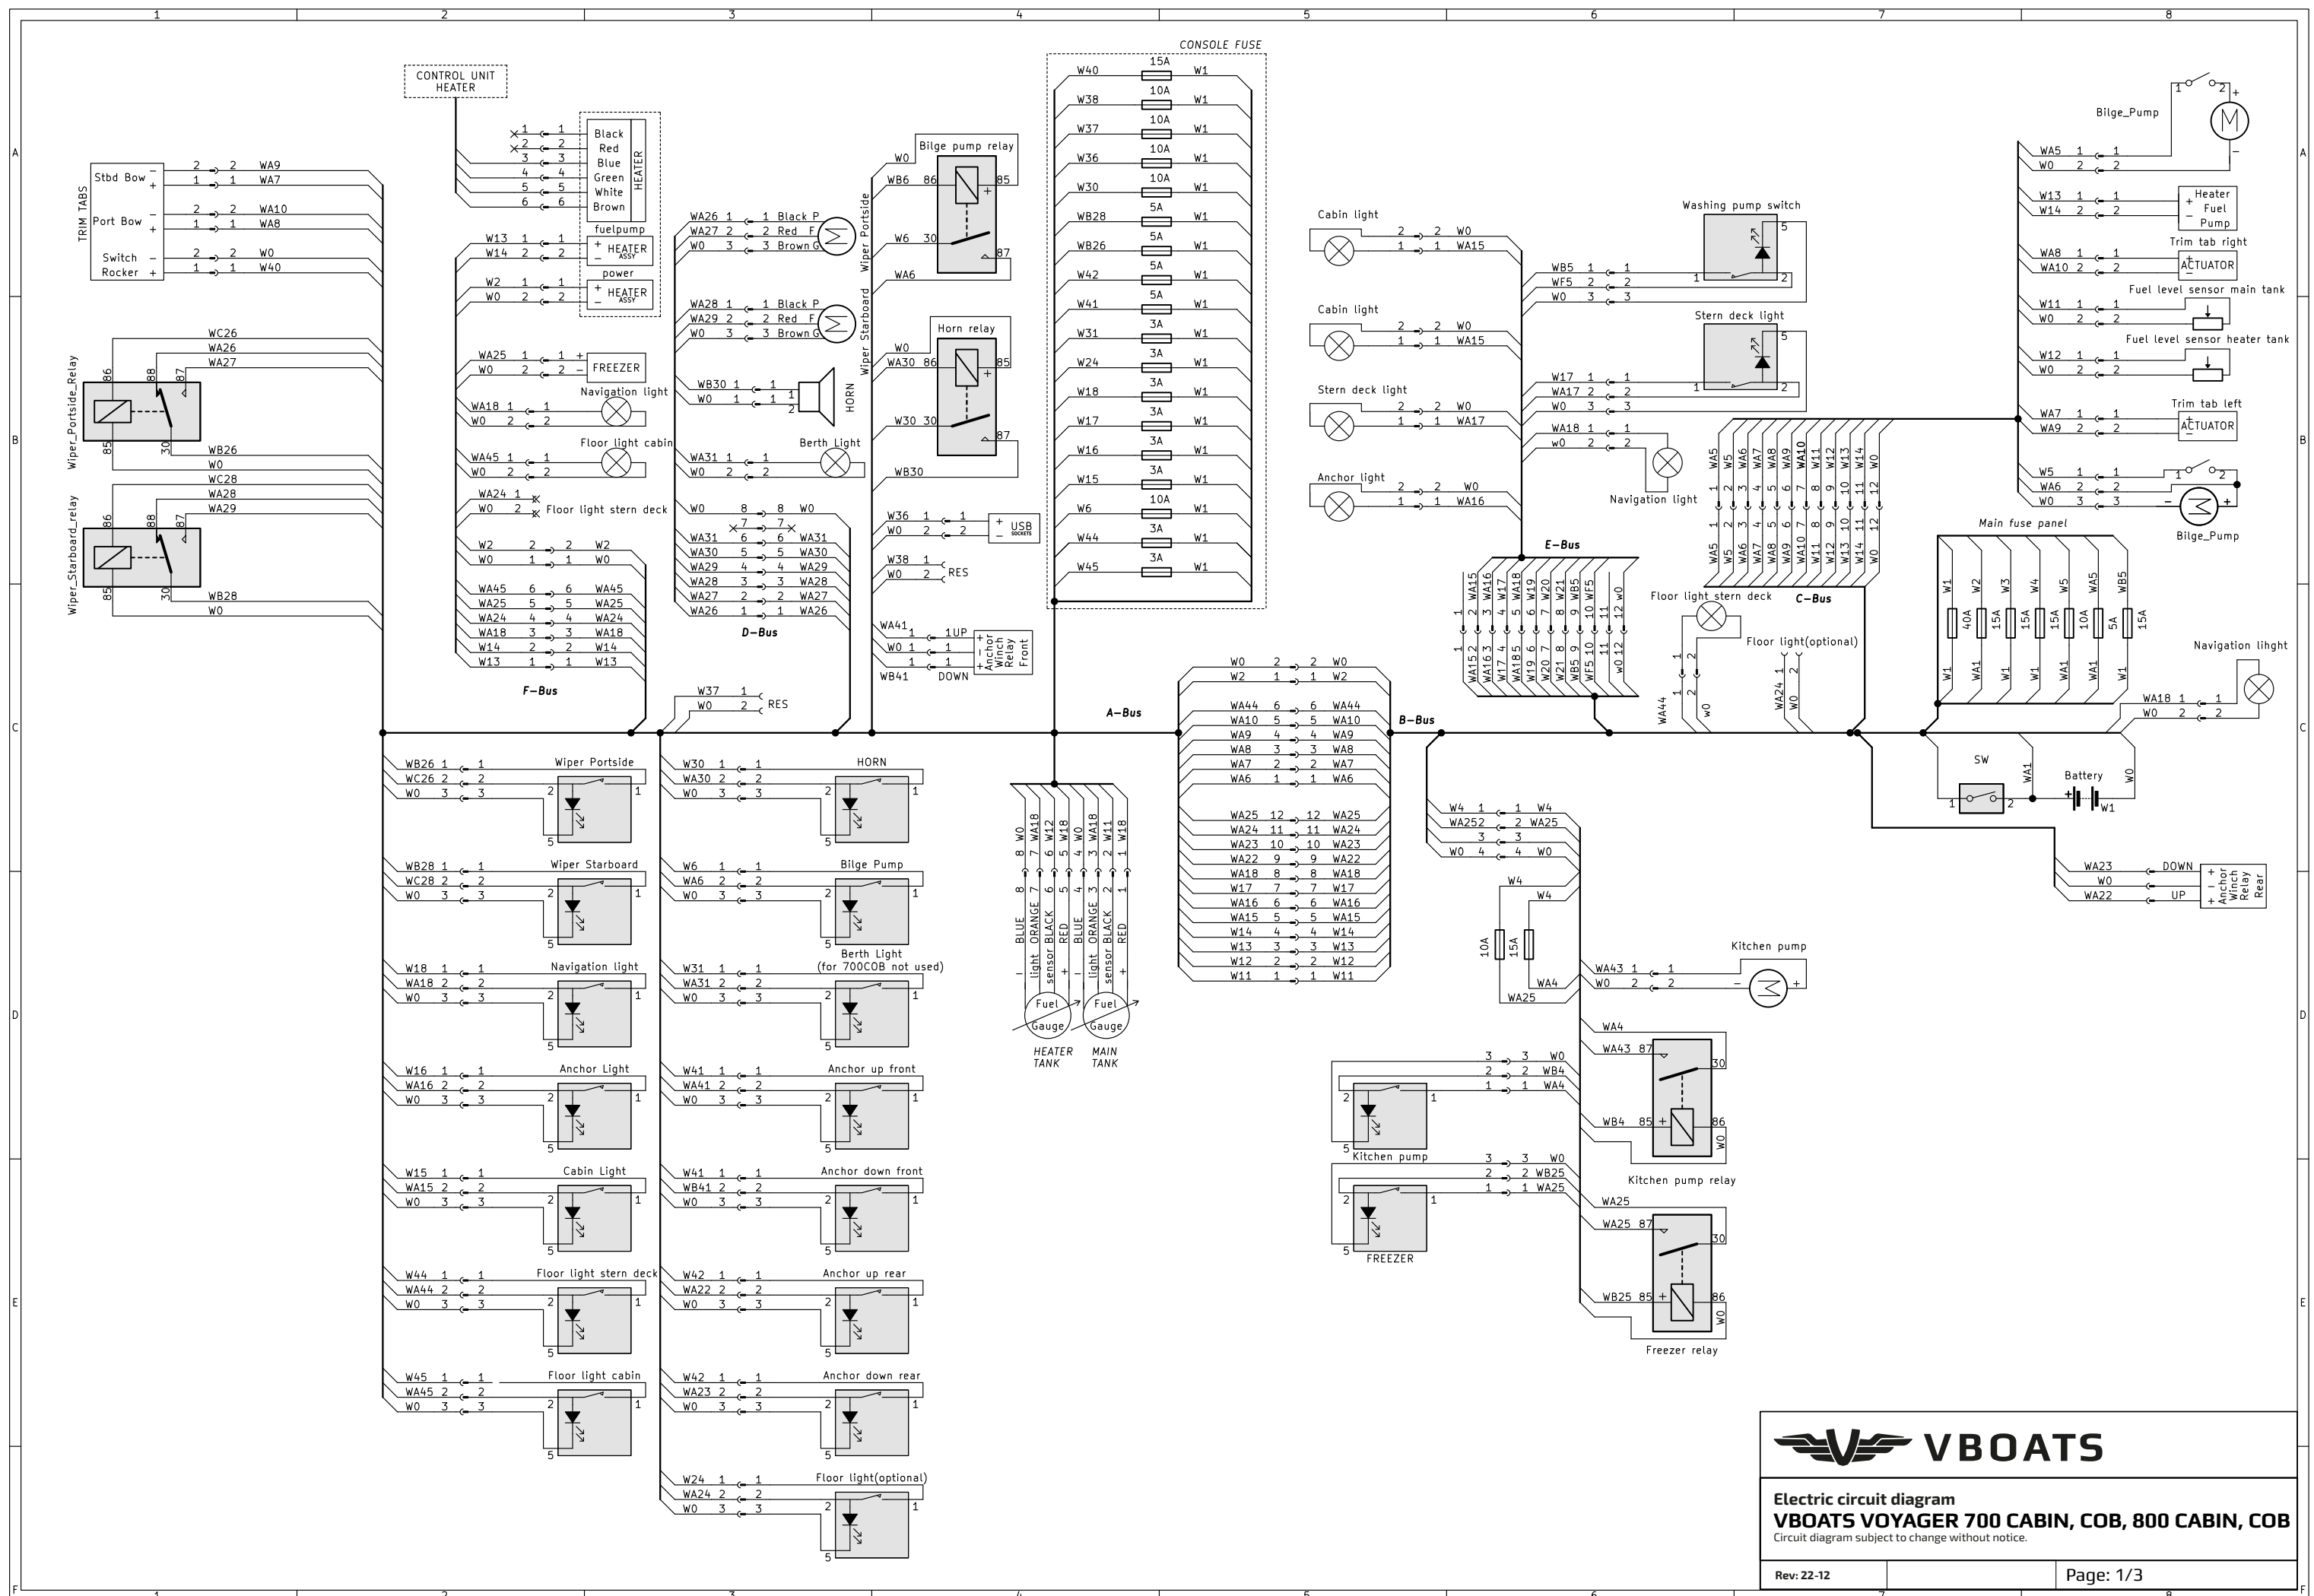

VBOATS



Electric circuit diagram

VBOATS VOYAGER 700 CABIN, COB, 800 CABIN, COB

Circuit diagram subject to change without notice.

Rev: 22-12

Page: 2/3

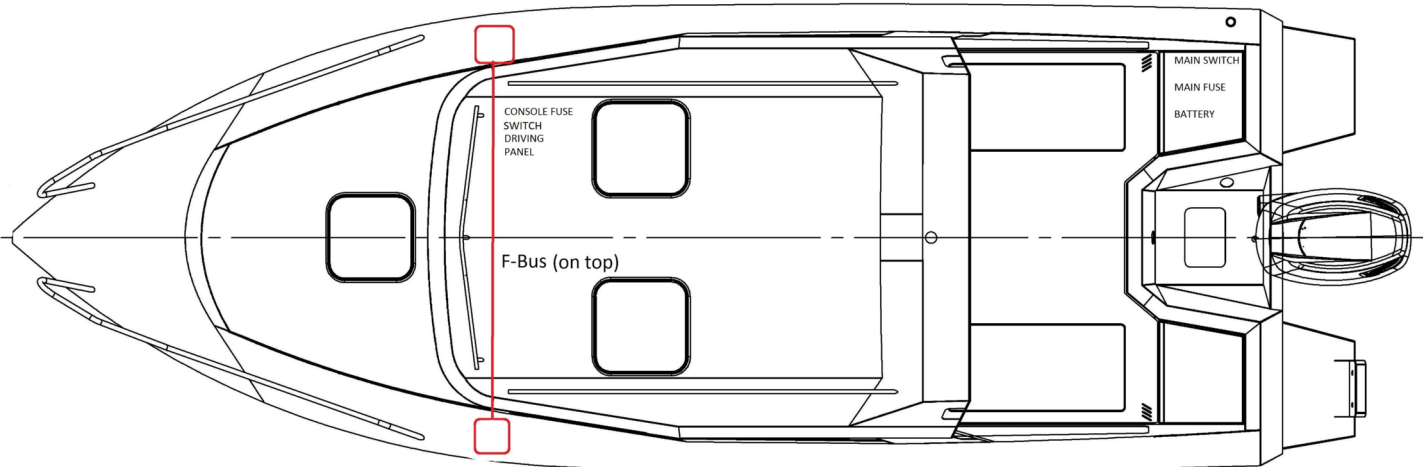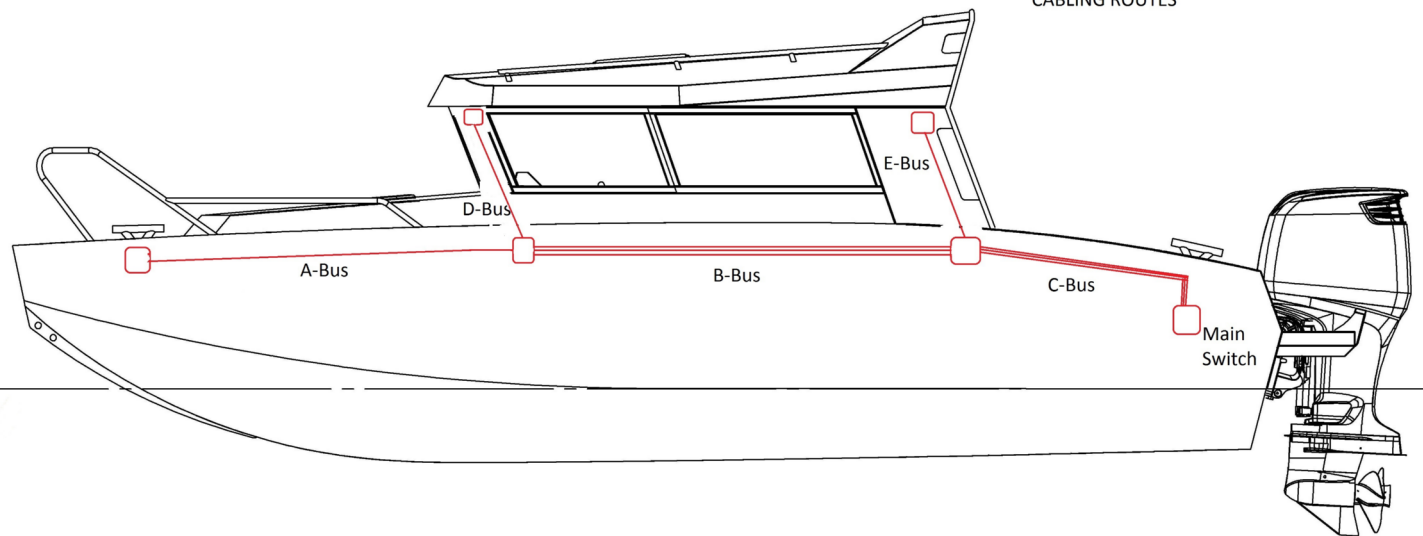

Electric circuit diagram
VBOATS VOYAGER 700 CABIN, COB, 800 CABIN, COB
 Circuit diagram subject to change without notice.

Rev: 22-12

Page: 3/3